

Lexmark


Z800, Z810, Z815, Z816, Z818, X3330, X3350, X5200, X5250,
X70, X5260, X5270, X7170, P315, P915 P6250, P6200, P4350. **Dell:** 1100, A922, A924, A942, A960 & A962.

Please Note: The label design on the Dell cartridges are slightly different to the one shown above. But filling order and instructions are the same.

BLACK CARTRIDGE:

1. Pierce through label on top of the cartridge. (See diagram above).
IMPORTANT - DO NOT REMOVE TOP.
2. Fill syringe with ink, insert the steel filling tube into the filling holes and push downward, into the center of the sponge. **SLOWLY** inject ink, when the ink bleeds from filling holes, cartridge is full. Stop injecting ink immediately.
3. Seal filling holes with adhesive tape.
4. Leave cartridge to stand overnight on a protective, non-absorbent surface, this will ensure no leakage and give the ink time to fully saturate the sponge.
IMPORTANT - DO NOT LEAVE ON TISSUE.
5. Install cartridge and run a priming cycle.

IMPORTANT: For best results, refill whilst ink still remains in the cartridge.
Empty cartridges left for more than a week do not always give a successful re-fill.

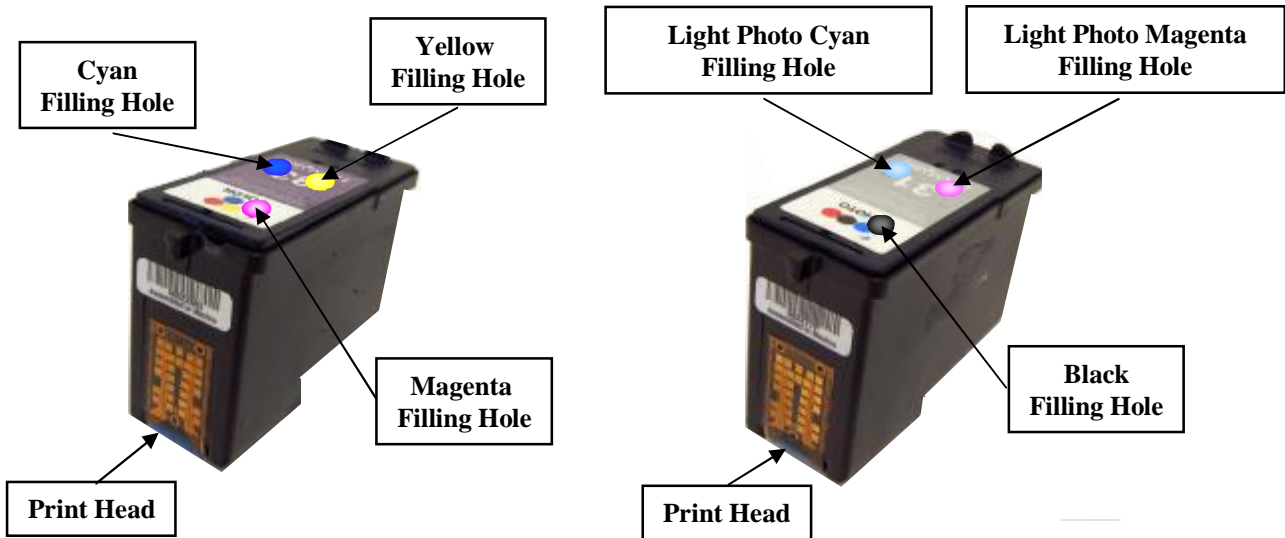

Lexmark

Z800, Z810, Z815, Z816, Z818, X3330, X3350, X5200, X5250, X70, X5260, X5270, X7170, P315, P915, P6250, P6200, P4350. **Dell:** 1100, A922, A924, A942, A960 & A962.

COLOUR & PHOTO CARTRIDGES:

Please Note: The label design on the Dell cartridges are slightly different to the one shown above. But filling order and instructions are the same.

1. The filler holes are located under the coloured label on top of the cartridge. Pierce through label with i.e. a ballpoint pen.
2. Assemble syringe and steel filling tube and fill with appropriate colour ink.
3. Insert the steel filling tube into the appropriate filling hole. (**See diagram above**). Push downwards into the center of the sponge.
IMPORTANT - Cartridge contains a sponge and a slight resistance may be felt.
4. **SLOWLY** inject ink. When ink overflows from filling hole or starts to bleed from the filling hole, cartridge is full. Stop injecting immediately. Blot printer head with tissue before continuing to fill next colour.
IMPORTANT - Clean syringe with water and dry before refilling next colour.
5. Seal filling holes with adhesive tape.
6. Leave cartridge to stand overnight on a protective, non-absorbent surface, this will ensure no leakage and give the ink time to fully saturate the sponge.
IMPORTANT - DO NOT LEAVE ON TISSUE.
7. Install cartridge and run a priming cycle.

IMPORTANT: For best results, refill whilst ink still remains in the cartridge. Empty cartridges left for more than a week do not always give a successful re-fill.